

FT-817 Full open!
Also on 27 MHz!

Model: FT-817	
File No.:	FT817.doc
Date of issue:	28 November 2000
Serial Number range	All
Page	1

Type	TX Frequency Range			RX Frequency Range			JUMPER (JP40**)					REMARKS			
	HF	VHF	UHF	HF	VHF	UHF	04	05	06	07	08	09	FM CH Step	RPT	Shift
B1	BAND 1	144-146	430-440	0.1-30/50-54/87.5-108	144-146	430-440	x	x	x		x		12.5/25kHz	0.1/0.0,6/7.6 MHz	
B2	BAND 1	144-146	430-440	0.1-33/33-56/76-108	108-154	420-470		x	x		x		12.5/25kHz	0.1/0.0,6/7.6 MHz	
➡	BAND 2	140-154	420-470	0.1-33/33-56/76-108	108-154	420-470				✗	x	✗	12.5/25kHz	0.1/0.0,6/7.6 MHz	
	C1	BAND 3	144-146	430-440	0.1-30/50-54/87.5-108	144-146	430-440	x	x	x	x	x	12.5/25kHz	0.1/0.5/0.6/1.6MHz	
C2	BAND 3	144-146	430-440	0.1-33/33-56/76-108	108-154	420-470		x	x	x	x		12.5/25kHz	0.1/0.5/0.6/1.6MHz	
C3	BAND 4	140-154	420-470	0.1-33/33-56/76-108	108-154	420-470				x	x		12.5/25kHz	0.1/0.5/0.6/1.6MHz	
D1	BAND 5	144-146	432-438	0.1-30/50-54/87.5-108	144-146	432-438	x	x	x			x	12.5/25kHz	0.1/0.0,6/1.6MHz	
D2	BAND 5	144-146	432-438	0.1-33/33-56/76-108	108-154	432-438		x	x			x	12.5/25kHz	0.1/0.0,6/1.6MHz	
H1	BAND 6	144-148	430-450	0.1-30/50-54/76-108	144-148	430-450		x	x	x	x		5/25kHz	0.1/1.0,6/5 MHz	
H2	BAND 6	144-148	430-450	0.1-33/33-56/76-108	108-154	420-470		x	x	x	x		5/25kHz	0.1/1.0,6/5 MHz	
B1	BAND 7	144-146	430-440	0.1-30/50-54/87.5-108	144-146	430-440	x	x	x		x		12.5/25kHz	0.1/0.0,6/1.6MHz	
B2	BAND 7	144-146	430-440	0.1-33/33-56/87.5-108	108-154	420-470		x	x		x		12.5/25kHz	0.1/0.0,6/1.6MHz	
E3	BAND 8	140-154	420-470	0.1-33/33-56/87.5-108	108-154	420-470			x		x	x	12.5/25kHz	0.1/0.0,6/1.6MHz	

BAND	160m	80m	40m	30m	20m	17m	15m	12m	10m	6m
1	1.815-1.890	3.500-3.800	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-52.000
2	1.800-2.000	3.500-4.000	7.000-7.500	10.000-10.500	14.000-14.500	18.000-18.500	21.000-21.500	24.500-25.000	28.000-30.000	50.000-54.00
3	1.810-2.000	3.500-3.800	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-54.000
4	1.800-2.000	3.500-4.000	7.000-7.500	10.000-10.500	14.000-14.500	18.000-18.500	21.000-21.500	24.500-25.000	28.000-30.000	50.000-54.000
5	1.820-1.850	3.500-3.800	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-54.000
6	1.800-2.000	3.500-4.000	7.000-7.300	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-54.000
7	1.810-1.850	3.500-3.8000	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.200-51.200
8	1.800-2.000	3.500-4.000	7.000-7.500	10.000-10.500	14.000-14.500	18.000-18.500	21.000-21.500	24.500-25.000	28.000-30.000	50.000-54.000


X Reset: Press and holding [F] and [V/M] keys at the same time then turn power on. X

X All modifications at your own Risk!! X

After modification, you must make a

RESET!

→ AT your own Risk! ←

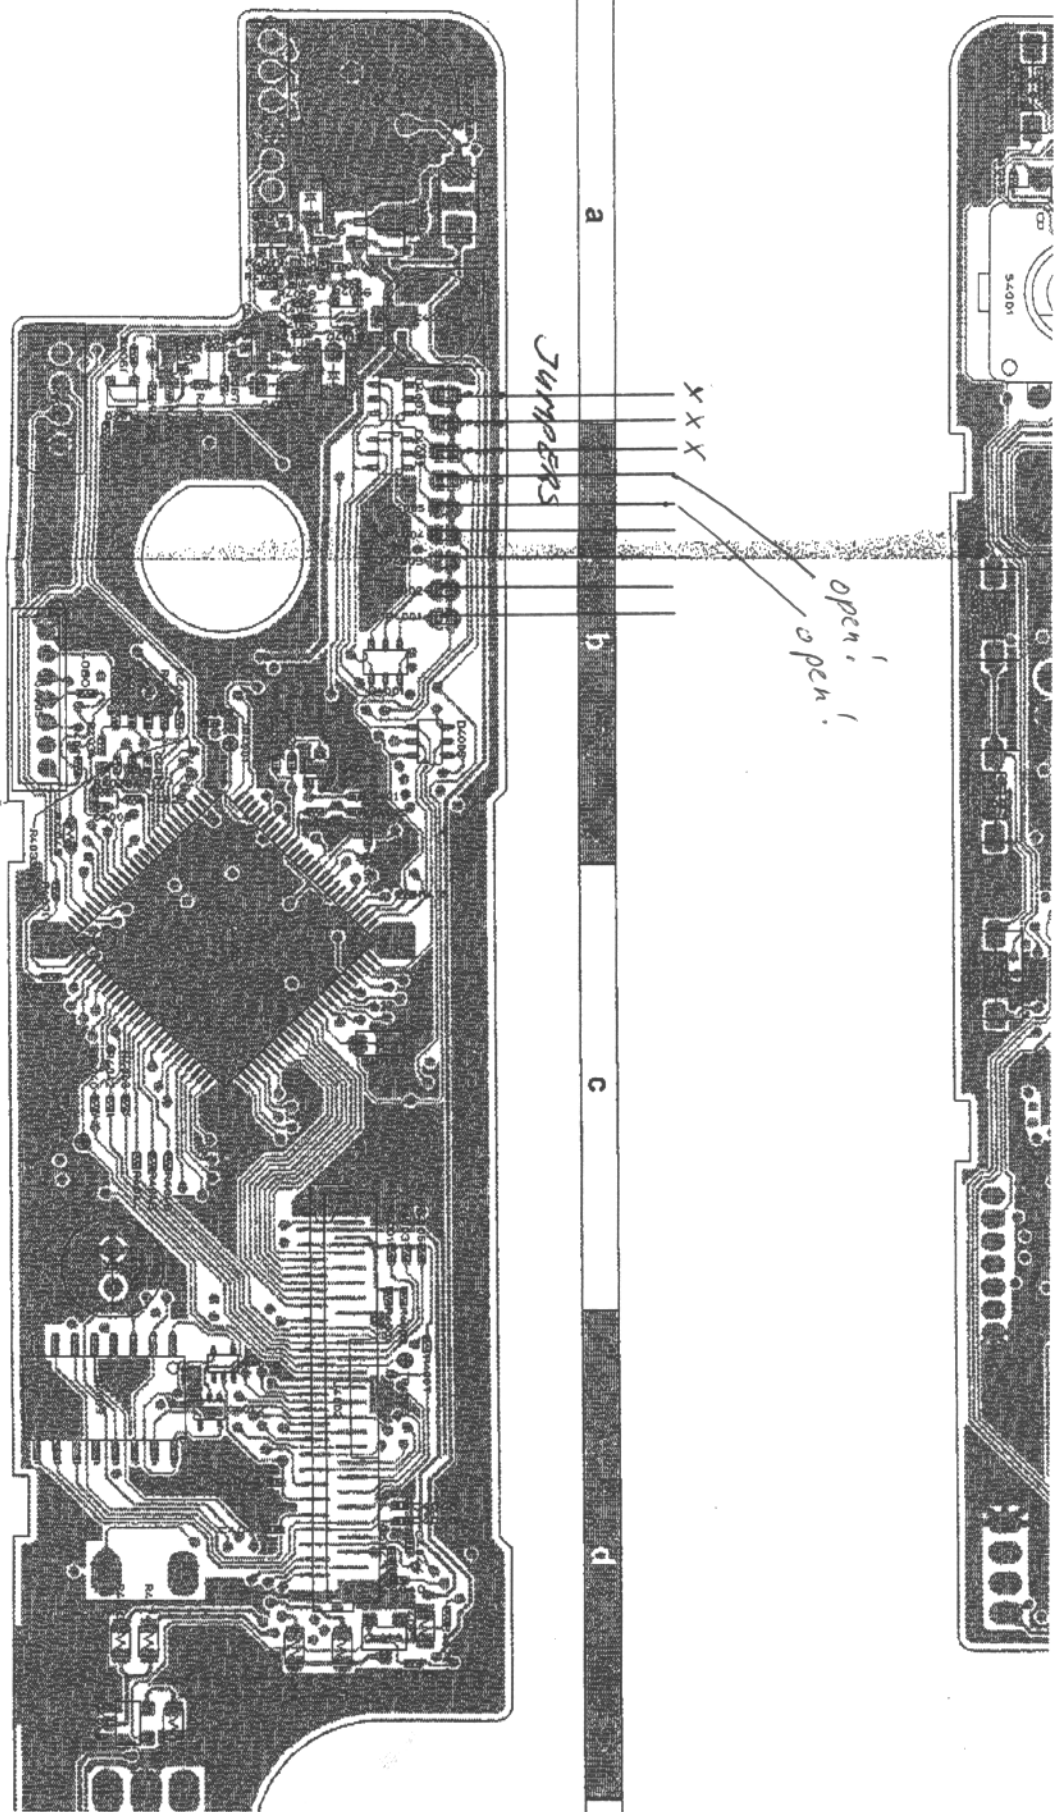

PANEL UNIT SIDE B
FT 017

IF you have a B2 Model
close 9
close 8
close 7
open 6
open 5

9 8 7 6 5 4 3 2 1

